


**STEP 4.** Install connectors on download and set 2 cable as shown in Figure 5. Attach download cable to jack on wall plate/power supply marked antenna as shown in Figure 4. Attach cable going to set 2 outlet to jack on power supply marked SET 2. Attach cable coming from cable input to jack on power supply marked CABLE.

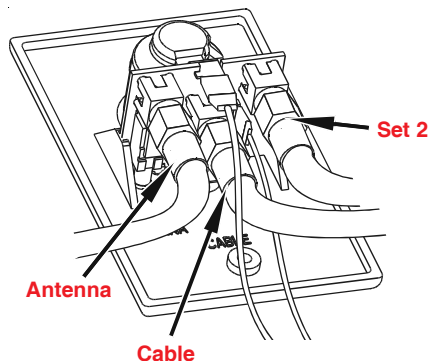


**Figure 4**

**STEP 5.** Mount power supply in wall with screws provided and attach TV set cable to jack on front. Connect band separator to VHF and UHF antenna terminals of TV set, if required. Press switch on front of outlet and check that light is on.

**OPERATION: To receive cable or satellite signals from outdoor receptacle:** Press switch to OFF (CABLE) position. Light on wall plate will go off showing that power is no longer connected to the antenna and that both TV sets are receiving signals from outdoor receptacle.

**To receive signals from antenna:** Press switch to ON (ANT) position. Light on wallplate will come on showing that power is connected to the antenna and both TV sets are receiving signals from the antenna.

**NOTE:** Make sure the antenna is in the operating position (up) and pointed at the station desired.

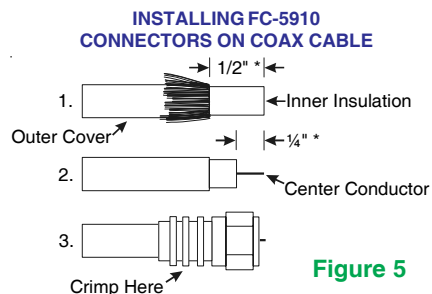

**Figure 5**

**STEP 1:** Strip outer cover back 1/2" from end of cable. Fray braid back as far as outer cover will allow.

**STEP 2:** Trim braid close to outer cover and remove 1/4" of inner insulation **being careful not to nick center conductor.** Make sure no foil or braid can touch center conductor.

**STEP 3:** Slide connector tip between braid and inner insulation (braid and foil, on foil shield cable) and push connector on cable as far as it will go. Crimp built-in ferrule with proper crimping tool. **Hex connector requires hex crimping tool. Do Not crush cable out-of-round.**

\* If installing in very hot weather, increase these dimensions 1/8".

## 2 YEAR LIMITED WARRANTY

Winegard Company warrants this Winegard product against any defects in materials or workmanship within 2 (two) years from date of purchase. No warranty claim will be honored unless at the time the claim is made, you present proof of purchase to an authorized Winegard dealer (if unknown, please contact Winegard Company, 3000 Kirkwood Street, Burlington, IA 52601-2000, Telephone 319-754-0600).

Winegard Company (at its option) will either repair or replace the defective product at no charge to you. This warranty covers parts, but does not cover any costs incurred in removal, shipping or reinstallation of the product. The warranty does not extend to products which have been subjected to misuse, improper installation, or to damage caused by wind, lightning, ice or other occurrences over which the manufacturer has no control.

The 2 Year Warranty is provided on the condition that the equipment is properly delivered with all handling and freight charges prepaid to your Winegard dealer for return to our factory for repair or replacement. Winegard dealers will arrange for the replacement or repair and return to you without charge the product which failed due to defective material or workmanship.

WINEGARD COMPANY WILL NOT ASSUME ANY LIABILITIES FOR ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, MADE BY ANY OTHER PERSON.

ALL OTHER WARRANTIES WHETHER EXPRESS, IMPLIED OR STATUTORY INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY ARE LIMITED TO THE 2 YEAR PERIOD OF THIS WARRANTY.

The foregoing shall be the sole and exclusive remedy of any person, whether in contract, tort or otherwise, and Winegard shall not be liable for incidental or consequential damage or commercial loss, or from any other loss or damage except as set forth above.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion of limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**WINEGARD COMPANY**  
3000 KIRKWOOD ST., BURLINGTON, IA 52601-2000  
Printed in U.S.A. 2451486 Rev. 9/99

## INSTRUCTIONS



Clearly the World's Best®

**MODELS RV-7012, RV-7032, RV-7042**

**Made in U.S.A.**

## RV WALL PLATE/ POWER SUPPLY

**This unit is equipped with a polyswitch,** (current limiting device), which will shut down +12VDC if there is a direct short between antenna and power supply. Green indicator light will not light. Once short is eliminated, device will reset itself in approximately 2 minutes.


## DESCRIPTION

Wall plate/power supply to operate Winegard RV antenna with outdoor receptacle for TV set and cable or satellite input. Wall plate/power supply provides +12VDC to antenna and +12 volt receptacle as well as antenna signals to two TV sets. Cable input from outdoor receptacle connects to wall plate and may be switched so either antenna or cable or satellite signals may be watched. See applications.



**NOTE: THIS UNIT IS NOT AN AMPLIFIER. USE ONLY WITH A WINEGARD AMPLIFIED RV ANTENNA.**

**WARNING:** Use of this on/off power switch with any product other than Winegard amplified RV antenna, could result in fire or other damage.

## APPLICATIONS AND ALTERNATE CONNECTIONS

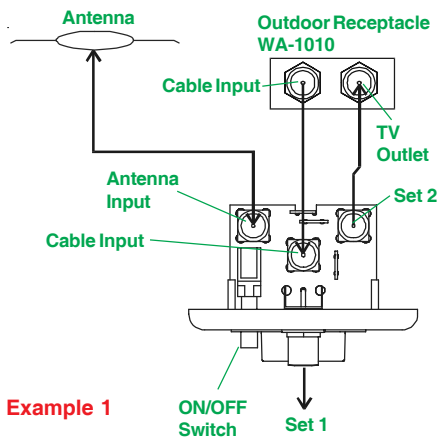

**WARNING:** Do Not Connect High Current Devices Such as Hair Dryers to +12 Volt Receptacle on Wall Plate/Power Supply. Maximum current ratings of this receptacle is 7.5 amps at +12 VDC.

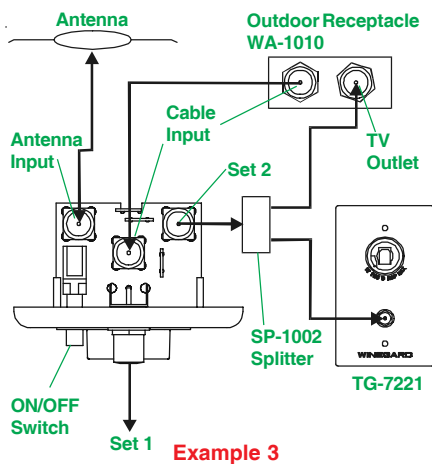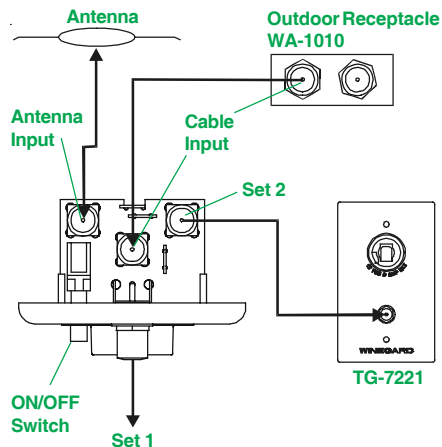

## INSTRUCTIONS

**STEP 1.** Select location for wall plate and patio receptacle. Run two coax cables between locations and install connectors on each end. **Mark cables so "cable input" and "TV output" may be identified.** Antenna downlead and +12 VDC will also be needed at inside wall plate/power supply location.

**STEP 2.** The wall plate/power supply assembly may be flush mounted in most standard electrical boxes. To flush mount cut a hole in wall to fit the box. Run 2 #12 wires between wall plate/power supply and +12VDC source and route downlead cable to this location. Install cable between set 2 outlet and power supply location at this time.

**WHEN CONNECTING CABLE OR WIRES BE SURE SWITCH IS IN OFF POSITION.**

**STEP 3.** Make +12 volt connection to wall plate/power supply Figure 2. Install terminals on wires from +12VDC source as shown in Figure 1. Crimp terminals with Craftsman type 4 crimping tool or equivalent. Push wires onto tabs on terminal board as shown in Figure 2. If in doubt as to the polarity of the wires, connect them temporarily to tabs on circuit board and press switch on front of outlet. If light comes on, polarity is correct. See Figure 3.

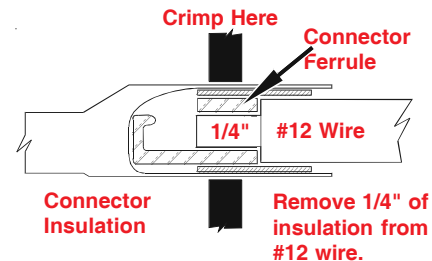


Figure 1


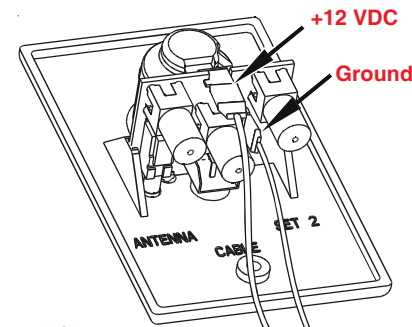


Figure 2

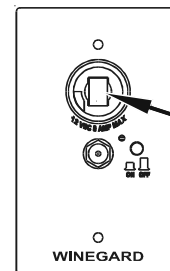

**WARNING**  
DO NOT connect high current devices such as hair dryers to this receptacle. Maximum current rating of this receptacle is 7.5 amps at 12 VDC.

Figure 3